


# TP-LINK<sup>®</sup>

## User Guide

### TD-8811

### External ADSL2+ Router

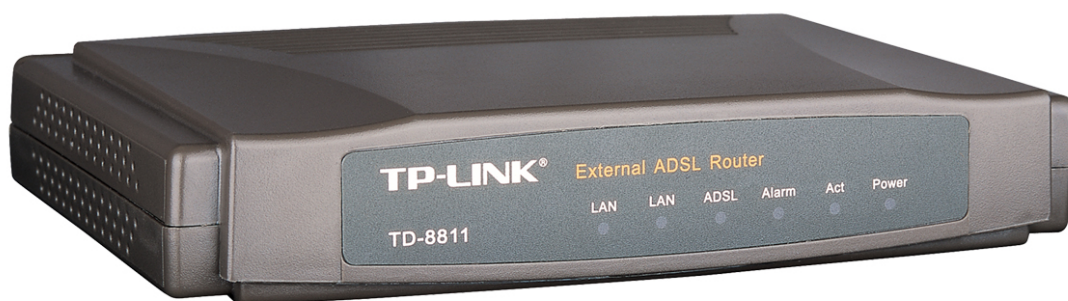

## **COPYRIGHT & TRADEMARKS**

Specifications are subject to change without notice. **TP-LINK**<sup>®</sup> is a registered trademark of TP-LINK Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK Technologies Co., Ltd. Copyright © 2006 TP-LINK Technologies Co., Ltd. All rights reserved.

## **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CE Mark Warning**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## **EC DECLARATION OF CONFORMITY (EUROPE)**

In compliance with the EMC Directive 89/336/EEC, Low Voltage Directive 73/23/EEC, this product meets the requirements of the following standards:

- EN55022
- EN55024
- EN60950

## **SAFETY NOTICES**

**Caution:** Do not use this product near water, for example, in a wet basement or near a swimming pool.

Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

Package contents.....	2
Chapter 1: Product Overview .....	3
1.1 Product main specification .....	3
1.2 Supporting protocol.....	3
1.3 Transmit data-rate .....	4
1.4 ATM property.....	4
1.5 System support .....	4
1.6 Working environment .....	4
1.7 Electric parameter .....	4
Chapter 2: Hardware Installation Guide .....	5
2.1 System requirement.....	5
2.2 LED explanation.....	5
2.3 Rear-panel .....	5
2.4 Hardware installation procedures (figure2-1) .....	6
Chapter 3: System Configuration .....	7
3.1 Computer Configuration.....	7
3.2 Login .....	8
3.3 Web Setup .....	10
3.4 Software Dial.....	19
3.5 USB Configuration .....	20
Chapter 4: Advantage management setup.....	23
Chapter 5: FQA.....	24
Appendix A: Default Configuration .....	25
Appendix B: Contact Information.....	26

## Package contents

The following contents should be found in your box:

- One TD-8811 External ADSL2+ ROUTER
- One AC power Adapter for TD-8811 External ADSL2+ ROUTER
- One Resource CD for TD-8811 External ADSL2+ ROUTER, including:
  - This Guide
  - Quick installation Guide Program
  - Other Helpful Information
  - USB driver
- Quick installation Guide
- One RJ45 cable
- Two RJ11 cable
- One ADSL splitter
- One USB cable

**Note:** If any of the above items are damaged or missing, please contact the retailer from whom you purchased the TD-8811 External ADSL2+ ROUTER for assistance.

## Chapter 1: Product Overview

TP-LINK® TD-8811 External ADSL ROUTER is the latest product designed and manufactured by TP-LINK Technologies Co., Ltd. With TP-LINK's excellent circuit design and high quality production, we guarantee the ADSL ROUTER's high performance, great stability and easy to use.

TD-8811 uses integrated ADSL2+ transceiver and a 256-MHz MIPS32 CPU, the AFE supports full-rate ADSL connectivity conforming to the ITU and ANSI specifications; MIPS32 CPU with MMU and 16-KB I-cache/8-KB D-cache is integrated into the device.

In addition to the basic DMT physical layer functions, the ADSL PHY supports dual latency ADSL framing (fast and interleaved) and the I.432 ATM Physical Layer.

The TD-8811 is a complete plug-and-play solution. With standard Ethernet interface, it can be directly connected to any 10M/100M Ethernet devices, support Auto-MDIX.

The TD-8811 not only uses html (web mode through Ethernet port) to configure the ROUTER but also uses external utility software, too. You can download it from our website (<http://www.tp-link.com>).

### 1.1 Product main specification

- Adopts the high performance IC which integrates the AFE transceiver and the 256 MHZ MIPS32 CPU, guaranteeing that this product is efficient and steady.
- High speed and asymmetrical data transmit mode, provides safe and exclusive bandwidth
- Supports All ADSL industrial standards
- Compatible with all mainstream DSLAM (CO)
- Firmware upgradeable
- Provides integrated access of internet and route function which face to SOHO user
- Advanced DMT modulation and demodulation
- Real-time Configuration and device monitoring
- Quick response semi-conductive surge protection circuit, provides reliable ESD and surge-protect function

### 1.2 Supporting protocol

- G.992.1 (G.dmt) - Annex A/B/C
- G.992.2 (G.lite) - Annex A/B/C
- ANSI T1.413
- G.992.3 (ADSL2) - Annex A/B/C/M and Annex L (RE-DSL) compliant
- G.992.5 (ADSL2+) Annex A/B/C and Annex L (RE-DSL) compliant
- ADSL dual latency (fast path and interleaved path)
- I.432 ATM physical layer compliant
- Supports RFC2364 (PPPoA)

- Supports RFC2516 (PPPoE)
- Supports RFC1483 (EoA)(Bridged \*and route)
- Supports RFC1577 (IPoA)

**NOTE.** “\*” Needs the third-party software.

### **1.3 Transmit data-rate**

- Max download data-rate: 24Mbps
- Max upload data-rate: 1Mbps
- Max line length: 6Km

### **1.4 ATM property**

- AAL0, AAL5, OAM, RM, and raw cell types supported
- Direct hardware support for 4 Receive VCs, with additional RX VCs and TX VCs supported in software
- Full 24-bit Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI)

### **1.5 System support**

- Support PVC
- Support NAT、DHCP and so on
- Support IEEE 802.3、IEEE 802.3u
- Support 10Base-T/100BASE-TX full-duplex or half duplex Ethernet
- Support Auto-MDIX
- Support USB 1.1 device interface

### **1.6 Working environment**

- Operating temperature: 0 °C~40 °C
- Storage temperature: -40 °C~70 °C
- Humidity: 10%~90% (non-condensing)

### **1.7 Electric parameter**

- Adaptor power Output: 9VAC/0.8A, 50Hz or 60 Hz
- Power consumption: 4W Maximum

## Chapter 2: Hardware Installation Guide

The TD-8811 maintains three separate interfaces, one Ethernet ,one USB interface and one ADSL interface. The Router should not be located where it will be exposed to moisture or excessive heat. Place the Router in a location where it can be safely connected to the various devices as well as to a power source.

### 2.1 System requirement

Confirm your computer has been installed with networking interface card (NIC) before connecting ADSL2+ ROUTER to your computer, with the operating system supporting the TCP/IP protocol.

### 2.2 LED explanation

The front panel of ADSL2+ ROUTER includes one power indicator (RED) and five function indicators (GREEN), as explained in chart 1-1:

Indicator	Description	Status	Function Details
PWR	Power	On Off	Power OK Power fail
ADSL	ADSL status	Slow flash Quick flash On	Self-detecting when power up Connecting to the telecom network Connection to telecom network OK
ALARM	Mistake	On Off	There is mistake when ADSL transmitting data or receiving data ADSL normal
ACT	Data	On Off	There is data transmitting or receiving on WAN port No data transmitting or receiving on WAN port
USB	USB status	On Off Flash	Connection to telecom network OK Connect on USB port abnormal Data transmitting or receiving
LAN	Ethernet	On Off Flash	LAN port normal Connection on LAN port abnormal Data transmitting or receiving on LAN port

Chart 1-1

### 2.3 Rear-panel

- **ON/OFF:** Turn on/off the ADSL2+ ROUTER's power.
- **Power (9VAC/0.8A input):** please do not use any unknown power adaptor,

otherwise your ADSL2+ ROUTER may be damaged.

- **RESET(reset default):** First press the reset button of ROUTER, then turn on the ROUTER's power for at least three seconds. It will resume the default manufacturer's setup.
- **LAN:** Connect with your computer's NIC.
- **USB:** Connect with your computer's USB interface
- **LINE(WAN):** Connect to the MODEM Port of Splitter or Connecting the telephone line.

## 2.4 Hardware installation procedures (figure2-1)

The procedure to install the Router can be described in general terms in the following steps:

**First Step:** Connecting the MODEM port of Splitter with the LINE port of the TD-8811 ADSL2+ ROUTER by telephone line. While you need to use a telephone, please attach telephone line into the phone of Splitter.

**Second Step:** Connect category 5 cable with RJ45 jacks to ADSL2+ ROUTER's LAN port and your computer's NIC. Or connect USB cable to ADSL2+ ROUTER's USB port and your computer's USB interface

**Third Step:** Plug one end of the AC Power Adapter into the Power jack on the Ethernet ADSL2+ ROUTER and the other end to a standard electrical outlet.

**Last Step:** Check the line connection to see if everything is ready. Power up finally.

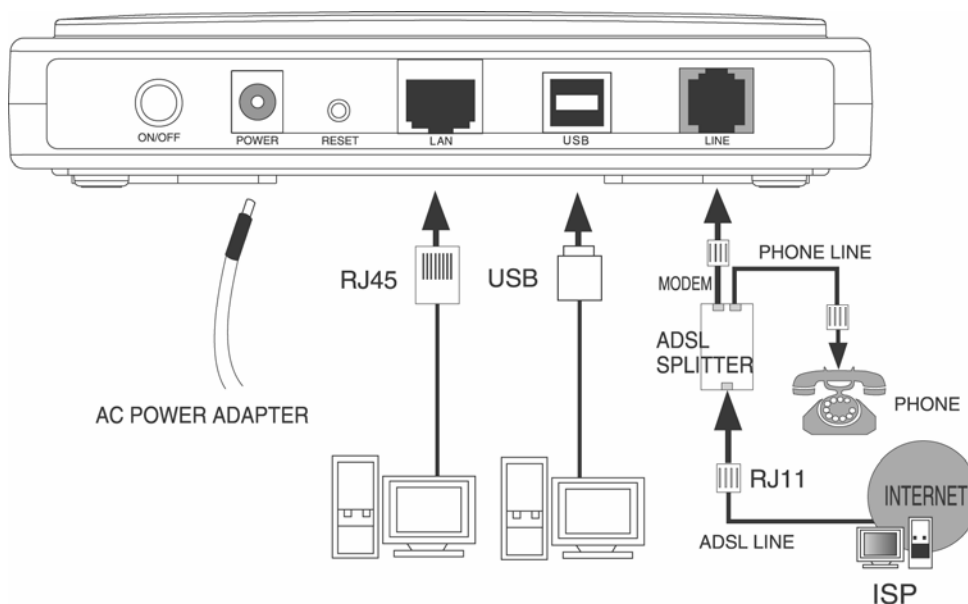


Figure2-1



## Chapter 3: System Configuration

### 3.1 Computer Configuration

1. Connect the cable according to Chapter 2, turn on the power.
2. Change the IP address of your PC (Figure 3-1): Open TCP/IP Properties of the LAN card in your PC, enter the IP address as 192.168.1.\* (\* is any value between 2 to 254, Net mask is 255.255.255.0, Gateway is 192.168.1.1, DNS address is the value provided by ISP).

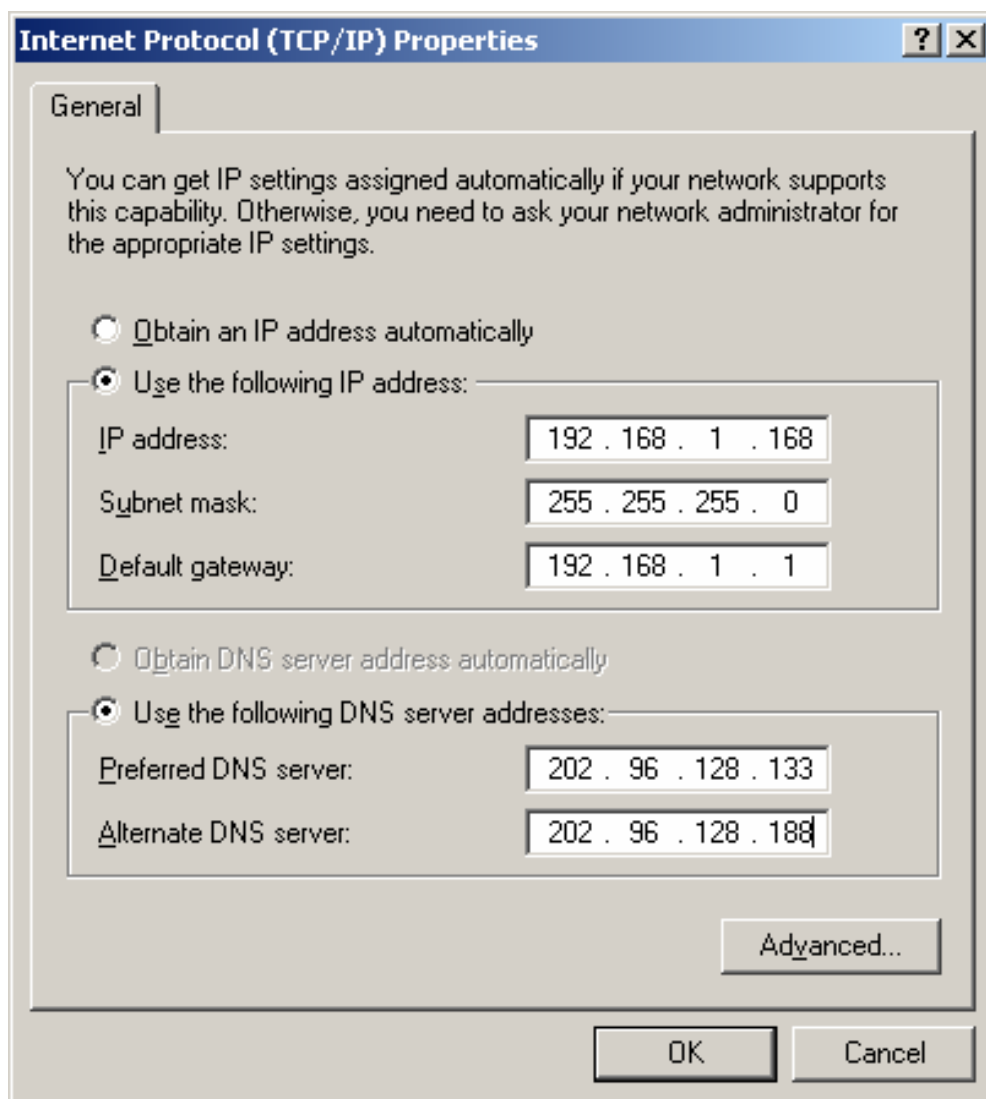


Figure 3-1

#### Please note:

Users of Windows 98 can open **TCP/IP Properties** according to the following: Right-click (Mouse) **Network Neighbor** -> Choose **Properties** -> Double-click **TCP/IP PCI Fast Ethernet Adapter**.

The users of Windows 2000/NT/XP can do the following: Right-press **Network Neighbor** ->Choose **Properties**->Right-press **Local Connection** ->Choose **Properties**->Double-click **Internet Protocol (TCP/IP)**.

**NOTE:** The words in fact may be different with this guide.

**Remarks:** you can check whether your configuration is successful through **PING** command. Enter **Ping 192.168.1.1**

If the screen looks like the following, you have been successful.

**Pinging 192.168.1.1 with 32 bytes of data:**

**Reply from 192.168.1.1: bytes=32 time<10ms TTL=128**

...

If the screen looks like the following, the connection has failed. Please try again.

**Pinging 192.168.1.1 with 32 bytes of data:**

**Request timed out.**

## 3.2 Login

Startup Internet Explorer, and enter 192.168.1.1;then enter default user name(admin)、password(admin), When ADSL2+ connection is OK, you will see the Figure 3-2.



Figure 3-2

You will then see the Figure 3-3. You will see some information such as link rate and so on.

**TP-LINK**

**TD-8811**

**Device Info**

Board ID:	96338L-2M-8M
Software Version:	3.02L.09.A2p8019b8.d16m
Bootloader (CFE) Version:	1.0.37-0.8

This information reflects the current status of your DSL connection.

Line Rate - Upstream (Kbps):	
Line Rate - Downstream (Kbps):	
LAN IP Address:	192.168.1.1
Default Gateway:	
Primary DNS Server:	192.168.1.1
Secondary DNS Server:	192.168.1.1

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-3

Default value of user name and password is “admin”; if you want to change them, please go to “**Management**” → “**Access control**”→“**Passwords**” changing them. (Figure 3-4)

**TP-LINK**

**TD-8811**

**Access Control -- Passwords**

Access to your DSL router is controlled through three user accounts: admin, support, and user.

The user name “admin” has unrestricted access to change and view configuration of your DSL Router.

The user name “support” is used to allow an ISP technician to access your DSL Router for maintenance and to run diagnostics.

The user name “user” can access the DSL Router, view configuration settings and statistics, as well as, update the router’s software.

Use the fields below to enter up to 16 characters and click “Apply” to change or create passwords. Note: Password cannot contain a space.

Username:

Old Password:

New Password:

Confirm Password:

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-4

### 3.3 Web Setup

Choose “**Advanced Setup**”→“**WAN**”, you will enter the page of Wide Area Network (WAN) Setup, you will see the Figure 3-5.

**Wide Area Network (WAN) Setup**

Choose Add, Edit, or Remove to configure WAN interfaces.  
Choose Save/Reboot to apply the changes and reboot the system.

VPI/VCI	Con. ID	Category	Service	Interface	Protocol	Igmp	QoS	State	Remove	Edit
0/32	1	UBR	br_0_32	nas_0_32	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
1/33	1	UBR	br_1_33	nas_1_33	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
0/35	1	UBR	br_0_35	nas_0_35	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
0/100	1	UBR	br_0_100	nas_0_100	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
8/35	1	UBR	br_8_35	nas_8_35	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
8/81	1	UBR	br_8_81	nas_8_81	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit
0/200	1	UBR	br_0_200	nas_0_200	Bridge	N/A	Disabled	Enabled	<input type="checkbox"/>	Edit

Add Remove Save/Reboot

Figure 3-5

There are 7 PVC links in the **WAN** setup page, choose the fit PVC according to your needs, and then click the **edit** button, you will enter the page of ATM PVC Configuration (See Figure 3-6).

**ATM PVC Configuration**

This screen allows you to configure an ATM PVC identifier (VPI and VCI) and select a service category. Otherwise choose an existing interface by selecting the checkbox to enable it.

VPI: [0-255]

VCI: [32-65535]

Service Category: **UBR Without PCR**

**Enable Quality Of Service**

Enabling packet level QoS for a PVC improves performance for selected classes of applications. QoS cannot be set for CBR and Realtime VBR. QoS consumes system resources; therefore the number of PVCs will be reduced. Use **Advanced Setup/Quality of Service** to assign priorities for the applications.

Enable Quality Of Service ☐

Back Next

Figure 3-6

Enter **VPI/VCI** value and service category which is provided by your ISP, click **next** to enter the next step. You will see the figure 3-7.

**NOTE:** The type of network protocol selected may be different in different areas, there are five types (Figure 3-7) , So you should ask your ISP to acquire the local type of network protocol and Encapsulation mode.

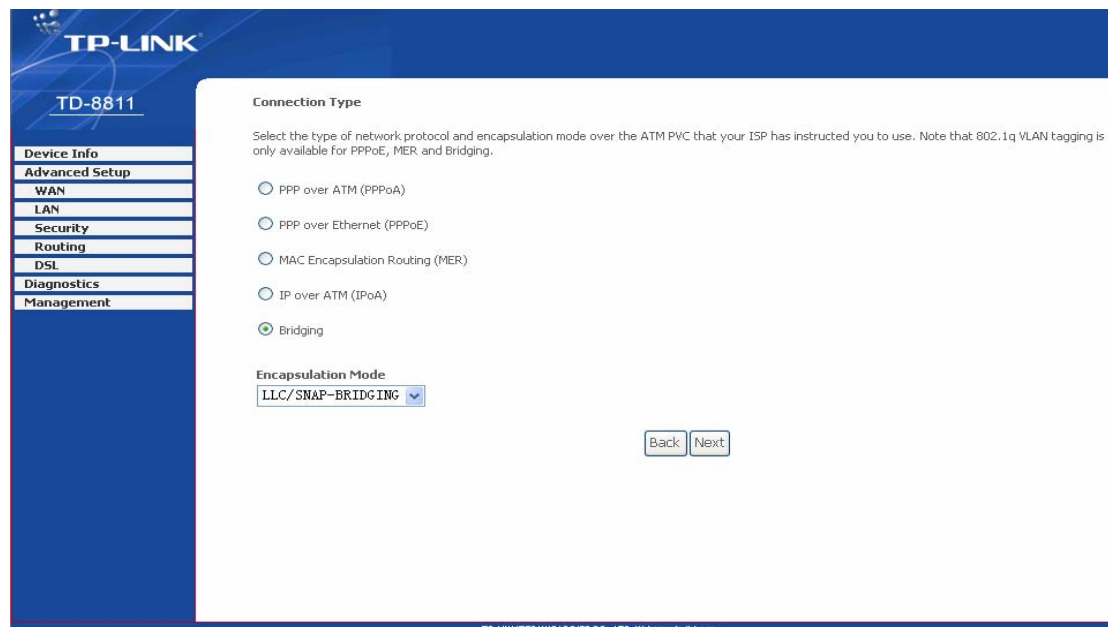


Figure 3-7

After choosing the proper protocol, enter the correct parameters supported by your ISP .Enable the configurations, then you will go to Internet.

### ➤ **PPP over ATM (PPPoA)**

If you select the protocol of PPP over ATM (PPPoA), you will see the figure 3-8, enter the value of user name and password which is provided by your ISP, after selecting the other function(often using the default setup), click the **next** button.

**TP-LINK**

**TD-8811**

**Device Info**  
**Advanced Setup**  
 WAN  
 LAN  
 Security  
 Routing  
 DSL  
 Diagnostics  
 Management

**PPP Username and Password**

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

Authentication Method: **AUTO**

☐ Dial on demand (with idle timeout timer)

☐ PPP IP extension

☐ Use Static IP Address

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-8

You will see the figure 3-9. Then turn on the selected functions according to your demands. Clicking the **next** button to enter the next step, you will see the Figure 3-10, finally click **save** to complete the configuration.

**TP-LINK**

**TD-8811**

**Device Info**  
**Advanced Setup**  
 WAN  
 LAN  
 Security  
 Routing  
 DSL  
 Diagnostics  
 Management

**Enable IGMP Multicast, and WAN Service**

Enable IGMP Multicast ☐

Enable WAN Service ☒

Service Name:

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-9

**TP-LINK**

**TD-8811**

**WAN Setup - Summary**

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	8 / 81
Connection Type:	PPPoA
Service Name:	br_8_81
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

Click "Save" to save these settings. Click "Back" to make any modifications.  
NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

[Back](#) [Save](#)

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-10

### ➤ PPP over Ethernet (PPPoE)

If you select the protocol of PPP over Ethernet (PPPoE), you will see the figure 3-11, enter the value of user name and password which is provided by your ISP, after selecting the other function (often using the default setup), click the **next** button.

**TP-LINK**

**TD-8811**

**PPP Username and Password**

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

PPPoE Service Name:

Authentication Method: [AUTO](#)

☐ Dial on demand (with idle timeout timer)

☐ PPP IP extension

☐ Use Static IP Address

[Back](#) [Next](#)

Figure 3-11

You will see the figure 3-12. Then turn on the selected functions according to your needs.

Clicking the **next** button to enter the next step, you will see the Figure 3-13, finally click **save** to complete the configuration.

TP-LINK

TD-8811

Device Info  
Advanced Setup  
WAN  
LAN  
Security  
Routing  
DSL  
Diagnostics  
Management

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast: ☐

Enable WAN Service: ☒

Service Name:

Back Next

TP-LINK TECHNOLOGIES CO., LTD. <http://www.tp-link.com>

Figure 3-12

TP-LINK

TD-8811

Device Info  
Advanced Setup  
WAN  
LAN  
Security  
Routing  
DSL  
Diagnostics  
Management

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	8 / 81
Connection Type:	PPPoE
Service Name:	br_8_81
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

Click "Save" to save these settings. Click "Back" to make any modifications.  
NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

Back Save

TP-LINK TECHNOLOGIES CO., LTD. <http://www.tp-link.com>

Figure 3-13

## ➤ MAC Encapsulation Routing (MER)



If you select the protocol of MAC Encapsulation Routing (MER), you will see the page(Figure 3-14) Enter the parameter and the way which is provided by your ISP, then click the **next** button.

**TP-LINK**

**TD-8811**

**Device Info**

**Advanced Setup**

**WAN**

**LAN**

**Security**

**Routing**

**DSL**

**Diagnostics**

**Management**

**WAN IP Settings**

Enter information provided to you by your ISP to configure the WAN IP settings.  
 Notice: DHCP can be enabled for PVC in MER mode if "Obtain an IP address automatically" is chosen. Changing the default gateway or the DNS effects the whole system. Configuring them with static values will disable the automatic assignment from DHCP or other WAN connection.  
 If you configure static default gateway over this PVC in MER mode, you must enter the IP address of the remote gateway in the "Use IP address". The "Use WAN interface" is optional.

☐ Obtain an IP address automatically

☒ Use the following IP address:

WAN IP Address:

WAN Subnet Mask:

☒ Obtain default gateway automatically

☐ Use the following default gateway:

☐ Use IP Address:

☐ Use WAN Interface:

☒ Obtain DNS server addresses automatically

☐ Use the following DNS server addresses:

Primary DNS server:

Secondary DNS server:

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-14

You will see the figure 3-15. Then turn on the selected functions according to your needs. Clicking the **next** button to enter the next step, you will see the Figure 3-16, finally click **save** to complete the configuration.

**TP-LINK**

**TD-8811**

**Device Info**

**Advanced Setup**

**WAN**

**LAN**

**Security**

**Routing**

**DSL**

**Diagnostics**

**Management**

**Network Address Translation Settings**

Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).

Enable NAT ☒

Enable Firewall ☒

**Enable IGMP Multicast, and WAN Service**

Enable IGMP Multicast ☐

Enable WAN Service ☒

Service Name:

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-15

**TP-LINK**

TD-8811

**Device Info**

**Advanced Setup**

WAN

LAN

Security

Routing

DSL

Diagnostics

Management

**WAN Setup - Summary**

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	8 / 81
Connection Type:	MER
Service Name:	br_8_81
Service Category:	UBR
IP Address:	192.168.1.1
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

Click "Save" to save these settings. Click "Back" to make any modifications.  
NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

Back Save

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-16

### ➤ IP over ATM (IPoA)

If you select the protocol of IP over ATM (IPoA), you will see the figure 3-17, enter the parameter and the way which is provided by your ISP, then click the **next** button.

**TP-LINK**

TD-8811

**Device Info**

**Advanced Setup**

WAN

LAN

Security

Routing

DSL

Diagnostics

Management

**WAN IP Settings**

Enter information provided to you by your ISP to configure the WAN IP settings.

Notice: DHCP is not supported in IPoA mode. Changing the default gateway or the DNS effects the whole system. Configuring them with static values will disable the automatic assignment from other WAN connection.

WAN IP Address: 192.168.1.1

WAN Subnet Mask: 255.255.255.0

☐ Use the following default gateway:

☐ Use IP Address:

☐ Use WAN Interface:

☐ Use the following DNS server addresses:

Primary DNS server:

Secondary DNS server:

Back Next

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-17

You will see the page (figure 3-18), then turn on the selected functions according to your needs. Clicking the **next** button to enter the next step, you will see the Figure 3-19, finally click **save** to complete the configuration.

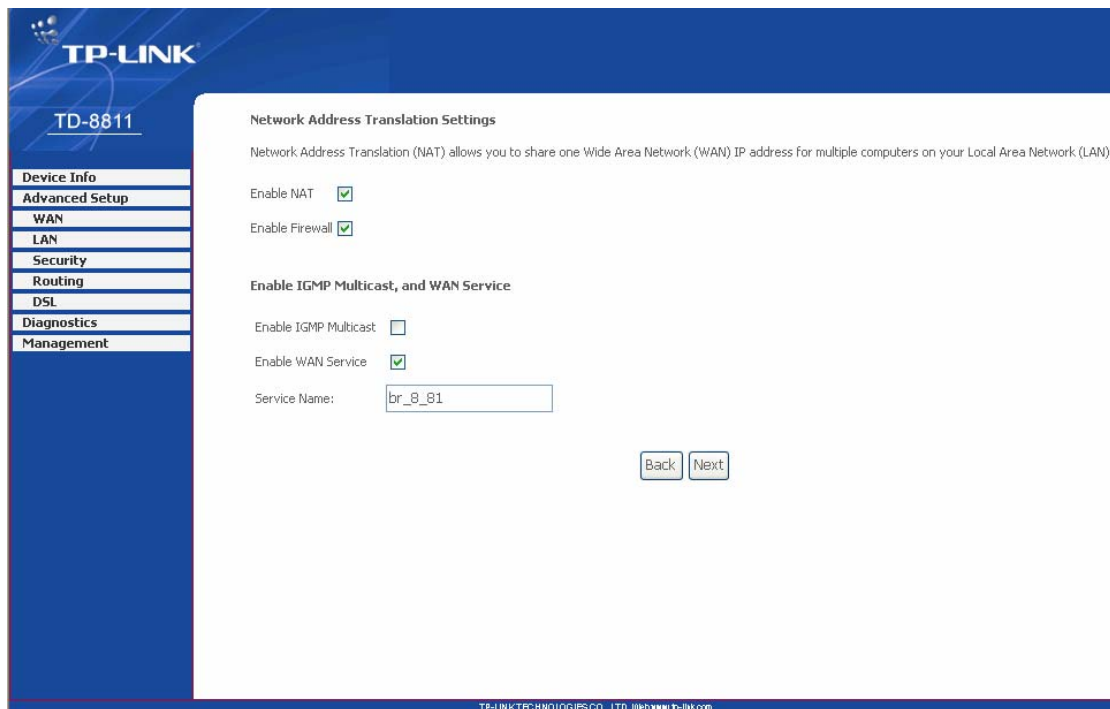


Figure 3-18

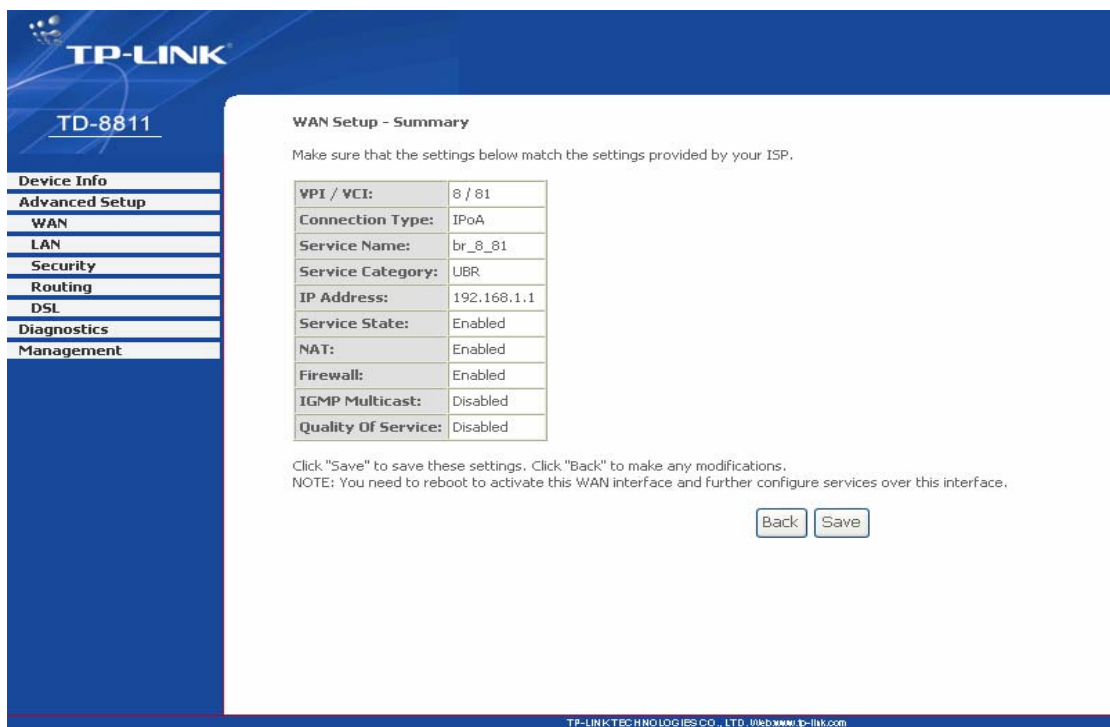


Figure 3-19

### ➤ Bridging

If you select the Bridging protocol, you just open the bridge service function options, you will see the figure 3-20, then click the **next** button, you will see the Figure 3-21, finally press **save** to complete the configuration.

TP-LINK

TD-8811

Device Info  
Advanced Setup  
WAN  
LAN  
Security  
Routing  
DSL  
Diagnostics  
Management

Unselect the check box below to disable this WAN service

Enable Bridge Service: ☒

Service Name:

Back Next

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-20

TP-LINK

TD-8811

Device Info  
Advanced Setup  
WAN  
LAN  
Security  
Routing  
DSL  
Diagnostics  
Management

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

VPI / VCI:	8 / 81
Connection Type:	Bridge
Service Name:	br_8_81
Service Category:	UBR
IP Address:	Not Applicable
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Not Applicable
Quality Of Service:	Disabled

Click "Save" to save these settings. Click "Back" to make any modifications.  
NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

Back Save

TP-LINK TECHNOLOGIES CO., LTD. [www.tp-link.com](http://www.tp-link.com)

Figure 3-21

**NOTE:** After you complete the settings, the new settings must be saved and the Router must be restarted for the settings to go into effect. Please press the **Save/Reboot** button to restart, referring to the Figure 3-22.

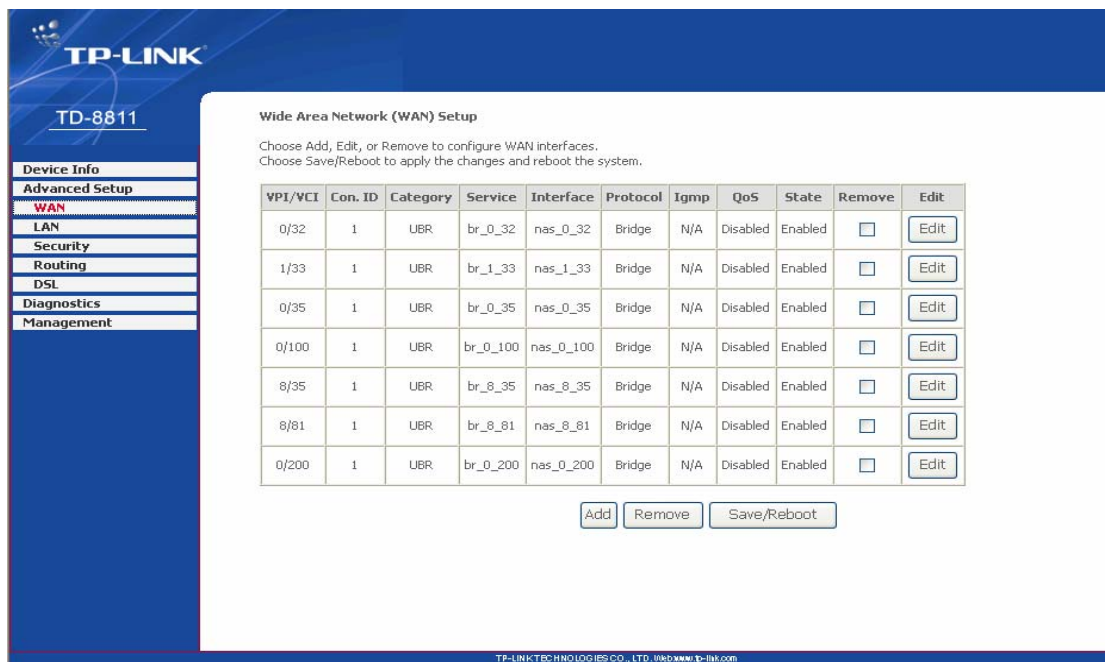


Figure 3-22

**NOTE:** All of the above setting is under windows XP OS.

### 3.4 Software Dial

If TD-8811 CPE work in bridged (RFC 1483 Bridged) mode when it connects Internet. You must to install dial software on your PC. There are some software working on WINDOWS in market, example for EnterNet3000、RASPPPoE、WinPeET.

How do I set up the connection in the windows XP?

- The users of Windows XP can click the **“start->All Programs->Accessories->Communications->New connection wizard”**, then click **Next** to enter the setting page.
- Please you select the **“connect to the internet”**, and then click the **Next** button to enter the next page and select the **“set up my connection manually”**, click **Next** to enter the next page.
- Please select the **“connect using a broadband connection that requires user name and password”**, click **Next** to type the name of your ISP in the current page, and then click **Next**.
- Type an **ISP account name** and **password**, if you have forgotten an existing account name or password, please connect with your ISP, click **Next**.
- To create the connection and close this wizard, click **finish** to add a shortcut to this connection to your desktop.
- When you assess the internet by ADSL, double-click this shortcut of dial connection in your desktop, type the account name and password, then click **connect** to connect the Internet.

### 3.5 USB Configuration

If you use the USB interface, First of all you must install the USB's drive to the using computer. You can obtain the drives from the provided CD or download from our website. (<http://www.tp-link.com>)

#### USB Drive installation procedures

If the hardware is installed before the computer is Power On. Please turn on the computer and enter into the windows operating system, Then the operating system will identify the device. If the hardware is installed after the computer is Power On The desktop will display the information of found the new hardware.

Then You will see the figure 3-23 require install software for USB Device, select 'Install from a list or specific location (Advanced)' and Clicking the **next** button to enter the next step. You will see the figure 3-24.

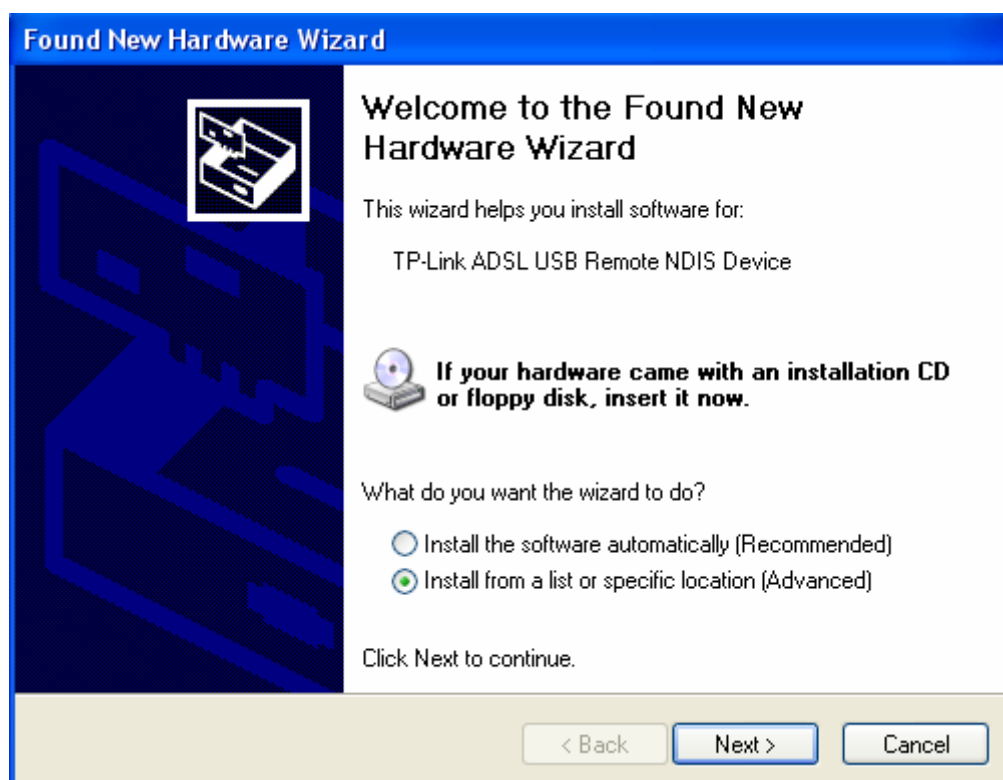


Figure 3-23

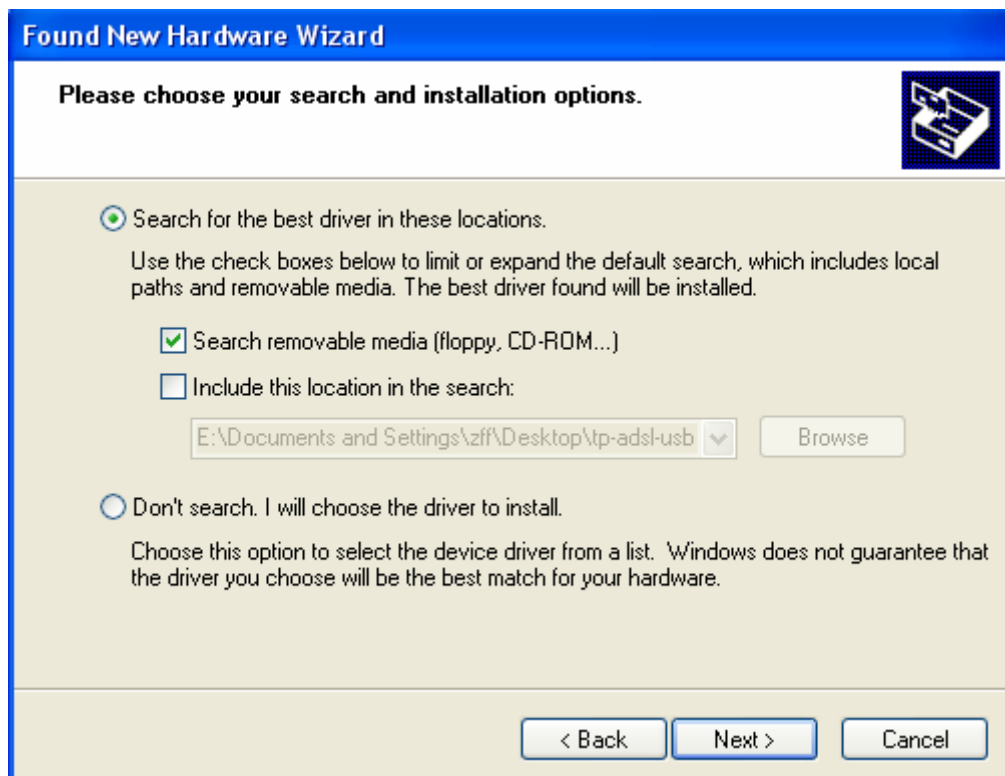


Figure 3-24

Select the 'search removable media(floppy, CD-ROM...)' and click the **next** button. You will see the figure 3-25. The driver will be search and installed.

**NOTE:** You must insert the CD first.

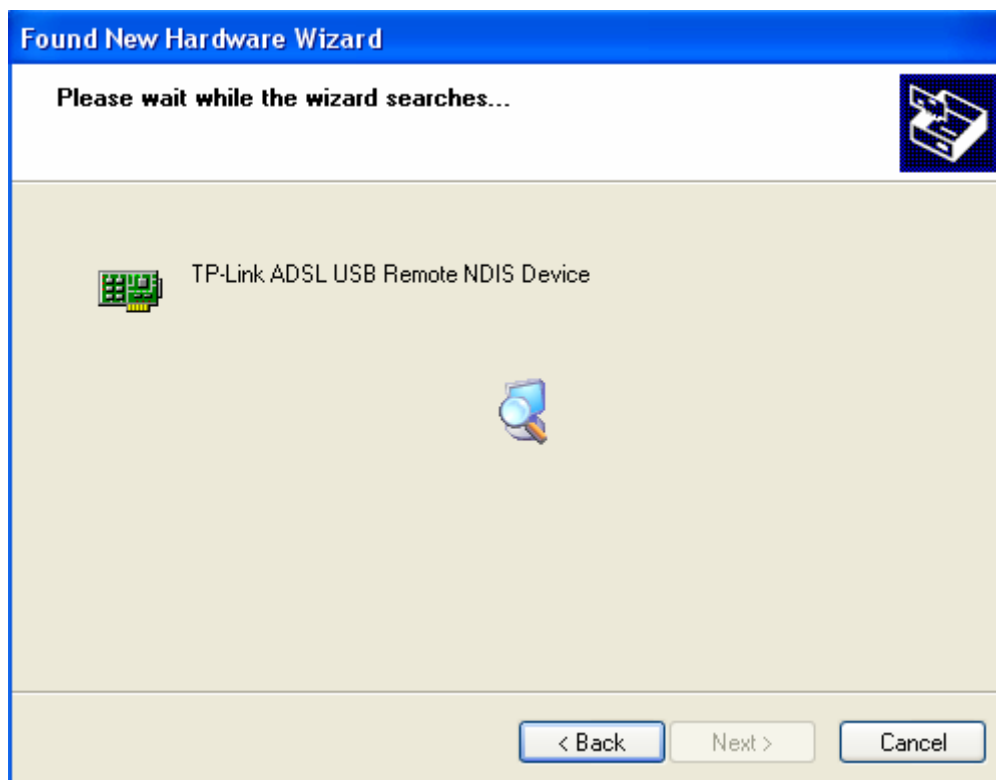


Figure 3-25

Waiting and you will see the figure 3-25. The driver has finished installation, click **Finish** to close the installation.

Please reference to chapter 3.1 to finish the IP configuration of USB network connect. Then you could use the USB device.



Figure 3-26

- NOTE:**
- 1 All of the above settings are under windows XP OS.
  - 2 If you want cut off the USB device you must disconnect the network of USB first.



## Chapter 4: Advantage management setup

In order to satisfy our customer's needs we offer an excellent Web management interface. Feel free to utilize the Advantage application and online software upgrades. The functions of the Web management interface are as follows:

- Upgrade software
- Modify the default IP address of the port of LAN(192.168.1.1)
- Modify the login password
- Configure DHCP
- Check the information of IP and the operation status
- Configure the NAT function
- Configure the DNS parameters
- Configure RIP(Routing Information Protocol)
- Configure IP route
- Configure Security rule
- Configure DSL parameter

**NOTE:** If you want to acquire further details, please access our website ([www.tp-link.com](http://www.tp-link.com)) and consult the advantage user guide of TD-8811.

## Chapter 5: FAQ

1. **What related parameters are required to acquire ISP when you want to access the internet by ADSL2+ ROUTER?**
  - 1) Dial user: Connection protocol, User name, Password, Value of VPI/VCI, Encapsulation mode of AAL5 and so on.
  - 2) Static IP user: Connection protocol, WAN IP Address, Subnet Mask, Gateway, Value of VPI/VCI, Encapsulation mode of AAL5 and so on.
2. **About Connection protocol, VCI/VPI, Encapsulation mode of AAL5**
  - 1) This product supports the PPP protocol over ATM (PPPoA)、PPP over Ethernet (PPPoE)、MAC Encapsulation Routing (MER)、IP over ATM (IPoA) and Bridging. You may be used with any one of the five protocols above. Because the ISP in different areas supports different protocol, you must choose the protocol which is supported by your ISP.
  - 2) The VPI is the English abbreviation of the Virtual Path Identifier, the VCI is the English abbreviation of the Virtual Channel Identifier, the value of VCI/VPI must be compatible with the value that provided by ISP.
  - 3) Encapsulation mode of AAL5 include: LLC/SNAP and VC\_MAX(often using LLC/SNAP).
3. **Why the LAN's and the NIC's LED both bright, but the configuration interface is inaccessible?**
  - 1) Use the order of **ping 192.168.1.1** to check the Accuracy of connection.
  - 2) Check the Accuracy of working NIC.
  - 3) Whatever the setup of the IP address on your computer (if you close the DHCP function, you can't obtain the IP address automatically, must specify the IP address of your computer manually).
  - 4) Run the winipcfg order in the windows 95/98(run the ipconfig order in the windows 2000) to check whether setup the IP address, subnet mask, default gateway by DHCP.
  - 5) Resume the ADSL2+ ROUTER default configuration if necessary.
4. **Have complete all configurations, but can't dial through computer**
  - 1) Check the indicator of ADSL2+, it should be working in normally.
  - 2) Check the accuracy of parameter of value of VPI/VCI, Encapsulation mode of AAL5 and so on, whether you need to install the software of dial the number, such as Winpoet, Enternet.
  - 3) This product has the PPP dial procedure inside, so you will not need to use the dial software if your protocol is PPPoA or PPPoE, ADSL2+ ROUTER will connect automatically.
  - 4) You can check whether your ADSL2+ ROUTER succeeds in connection with **PING** command.

## Appendix A: Default Configuration

USER NAME	admin
PASSWORD	admin
IP ADDRESS	192.168.1.1
VPI/VCI	0/32,1/33,0/35,0/100,0/200,8/35,8/81

## Appendix B: Contact Information

For help with the installation or operation of the TP-LINK TD-8811 External ADSL2+ ROUTER, please contact us.

**E-mail:** [support@tp-link.com](mailto:support@tp-link.com)

**Website:** <http://www.tp-link.com>